

1 Ch Mobile DVR

TVV980

Manual



CONTENT

1. Features.....	2
2. Specification.....	3
3. Rear Panel Description.....	4
4. Function Key Description.....	5
5. Playback Mode.....	6
5.1 Play Mode.....	6
5.2 Search.....	7
6. Recording Mode.....	8
7. Menu Set Up.....	9
7.1 Enter Main Menu.....	9
7.2 System Status.....	9
7.3 Date / Time.....	10
7.4 Record Setting.....	11
7.5 Record Mode.....	12
7.6 Alarm Output.....	14
7.7 Engineering Setup.....	15
7.7.1 Set Password.....	15
7.7.2 Camera Title Setup.....	16
7.7.3 Video Quality.....	16
7.7.4 Hard Disk Erase.....	17
7.7.5 Color-Bar.....	17
7.7.6 Load Factory Defaults.....	18
8. Recording Reference Time Table.....	18
9. Appendix.....	20

1. Features


- Automatically detects NTSC/PAL
(Please connect the video camera, before connecting the Power adaptor.)
- Tapeless recording replaces conventional time-lapse recorder.
- Video compression MJPEG
- Motion detection recording.
- Various recording mode by continue, schedule, and motion detection.
- 1 channel audio recording.
- Quick and easy search for events by time and date.
- Highly professional stabilized digital system, equipped with anti-vibration and shock resistance.
- Easy to operate front panel.
- Alarm notification will be made when storage capacity is full.
- Automatically return to the original operation when power recovery from failure.
- Suitable for all kinds of transportation appliance.
- Supporting function to format the new hard disk.

DVR 1 Port User Manual

2. Specification

Operation Mode	Front panel, OSD
Recording Speed	720 x 240 : 1–10 Frames/sec (adjustable) 360 x 240 : 1–15 Frames/sec (adjustable)
Recording Mode	Manual Schedule Motion Detection (Sensitivity Adjustable)
Audio Recording / Live Audio	1 ch
Compression	MJPEG
Camera Input	1 ch BNC (NTSC/PAL)
Video Output	Composite video (BNC) x 2
Playback Function	Playback — forward、reverse Fast forward Fast reverse Forward one frame Zoom in
HDD	30 GB
Built-in Buzzer	Video input signal trigger Motion
Watch-Dog Function	Automatically return to the original operation when power recovery from failure.
Search Mode	Date, Time
Operation Temperature	5 °C → 40 °C
Power Supply	AC100V~240V, 50/60Hz DC 12V/4A
Power Consumption	12 W
Dimension	175mm x 220mm x 44mm (W x D x H)
Weight	1.4 Kg

3. Installation

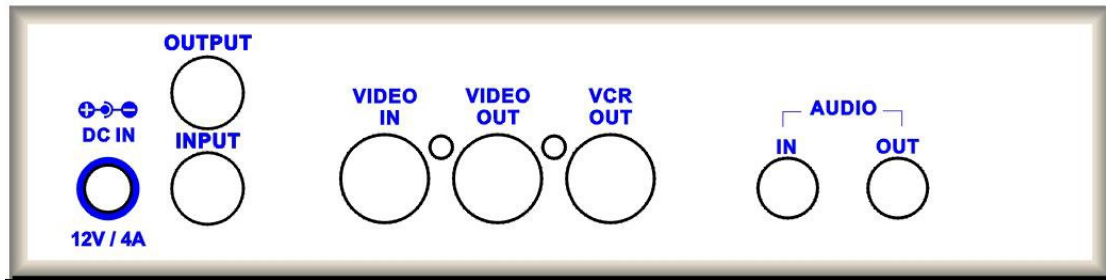

Rear panel

Power Supply : DC 12V , 4A.

OUTPUT : Image signal and sound output terminal.

INPUT : Image signal and microphone input terminal.

VIDEO IN : Image signal input, connected to the camera.




VIDEO OUT : "VIDEO OUT" is connected to monitor "VIDEO IN".

VCR OUT : "VCR OUT" is connected to the VCR "VIDEO IN".


AUDIO IN : For camera microphone connection.

AUDIO OUT : For speaker, as live and playback Audio.

CAUTIONS

-  Automatically detects NTSC/PAL, please connect the video camera, before connecting the Power adaptor.
-  **VIDEO OUT** and **AUDIO OUT** should not be applied when the **OUTPUT** terminal has been connected.
-  **VIDEO IN** and **AUDIO IN** should not be applied when the **INPUT** terminal has been connected.

4. Function Key Description

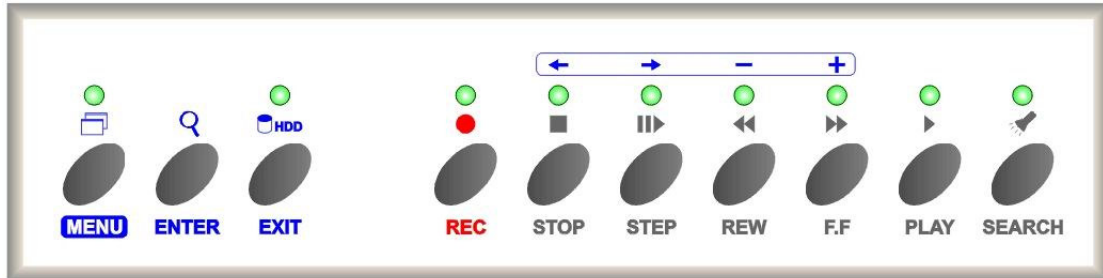

Front Panel

Single Function Key Description :

MENU : Menu set up

ENTER : Enter to sub-menu or editing procedure.

EXIT : Press this function key to return to the previous selection.

REC : Under normal mode, press this key to enter record mode.

PLAY : Under normal mode, press this key to enter the latest record file.

SEARCH : Under normal mode, press this key to display log file lists.

Dual Function Key Description :

STOP<-> , ■> :

Under the function setup mode, move to the left (up) item during editing procedure.

Under playback mode, press this key to stop playback mode and return to normal mode.

STEP <-> , ||▶> :

Under the function setup mode, move to the right (down) item during

DVR 1 Port User Manual

editing procedure.

Under playback mode, press this key to skip and pause the images.

REW < - , ◀▶ :

Under the function setup mode, the setup may be set to a value increase.

Under playback mode, press this key to fast reverse the images.

F.F. < + , ▶▶> :

Under the function setup mode, the setup may be set to a value decrease.

Under playback mode, press this key to fast forward the images.

5. Playback Mode

5.1 Play Mode

In normal mode, press **<PLAY>** key to enter the playback mode, or press **<SEARCH>** key to enter the log files list (including: date, time), then press **<PLAY>** key or **<ENTER>** key to display image.

- **Quick Image Search :**

Press **<F.F.>** key, for quick fast forward image search (x2, x4).

Press **<REW>** key, for quick fast reverse image (x1, x2, x4).

- **Skip Search :**

Press **<STEP>** key, to skip and pause images.

- **Zoom :**

When the resolution is 720x240, press **<ENTER>** key to enlarge, press **<II>** key and than press **<←>**、**<→>**、**<+>**、**<->** key to allow the zoom in window to be moved to all directions, press **<ENTER>** key again to return to its original size.

When the resolution is 360x240, press **<ENTER>** key to enlarge, press **<ENTER>** again to return to normal image size (360x240).

- **Stop mode :**

Press **<STOP>** key to stop play mode and return to normal mode.


5.2 SEARCH

According to date and time to perform searching function, press

<SEARCH> key to display the image below :

SEARCHING

YEAR	2002	
MONTH	08	
DAY	06	1 15 31
HOUR	18	0 12 23
MINUTE	32	0 30 59

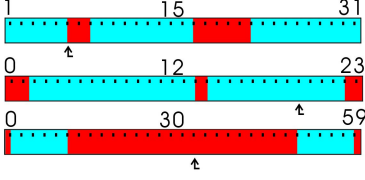

Use **<←>**、**<→>** key to move the cursor (Highlight) up and down to the area to be modified, press **<+>**、**<->** key to make changes.

Year、Month :

Enter the year / month by pressing **<+>** or **<->** key to select the year / month.

Day、Hour、Minute :

Enter the above setting by pressing **<+>** and **<->** key or **<▶▶>** and **<◀◀>** key.

After all selections has been made, press **<PLAY>** or **<ENTER>** key to enter play mode, or **<EXIT>** key to return to normal mode.

Red : Indicates that the area is under Motion Recording.

Blue : Indicates manual recording or schedule recording.

6. Recording Mode

Manual Recording : Under Normal mode, press <REC> key, then will start recording, press <STOP> key to stop manual recording.

- To stop manual recording, it takes 5 sec to stop manual recording.

Other function including: **Schedule Recording, Motion Detect Recording, Sensor Input Recording**, please refer to **Menu Setup**.

- After recording are set either to **Schedule Recording, Motion Detect Recording**, or **Sensor Input Recording** (set in **Recording Mode**). THE <STOP> key does not function when it has been pressed, due to protection on recordings set.
- When during recording, all items under **Main Menu** may not be entered to make adjustments, except in **System Status** and the **Recording Mode**.


7. Menu Set Up

7.1 Enter Main Menu

Press <MENU> key to enter **Main Menu**, using the cursor, which can be moved up and down by the <←>, <→> keys.

All the items in the main menu contain several sub menu will be described step-by step in the following section.

Press <ENTER> key to enter the menu.
Press <EXIT> key to return to the previous page.
Press <STOP> key to skip over the main menu (Image display).

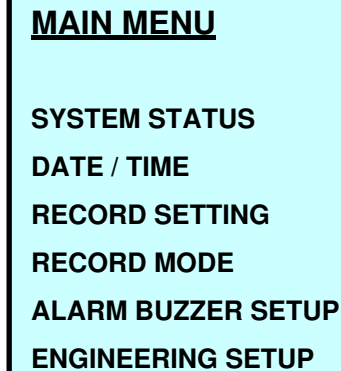

MAIN MENU


SYSTEM STATUS
DATE / TIME
RECORD SETTING
RECORD MODE
ALARM BUZZER SETUP
ENGINEERING SETUP

- When during recording, all items under **Main Menu** may not be entered to make adjustments, except in **System Status** and the **Recording Mode**.

7.2 System Status

When entered to the main menu, select **System Status**.

Press <ENTER> key to enter the menu.
Press <EXIT> key to return to the previous page.
Press <STOP> key to skip over the main menu (Image display).

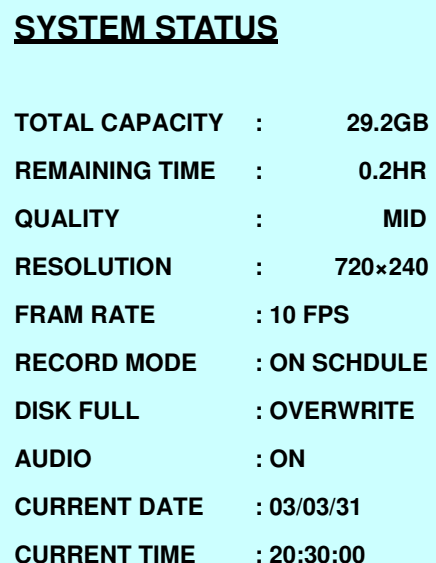

SYSTEM STATUS

TOTAL CAPACITY : 29.2GB
REMAINING TIME : 0.2HR
QUALITY : MID
RESOLUTION : 720×240
FRAM RATE : 10 FPS
RECORD MODE : ON SCHEDULE
DISK FULL : OVERWRITE
AUDIO : ON
CURRENT DATE : 03/03/31
CURRENT TIME : 20:30:00

DVR 1 Port User Manual

When entered to the main menu, select **Date / Time** and press **<ENTER>** key to enter the menu:

Press **<←>**、**<→>** key to move the cursor

Press **<+>**、**<->** key to make changes

Press **<EXIT>** key to return to the previous menu.

Press **<STOP>** key to skip over the main menu (Image display).

DATE / TIME

DATE FORMAT		YY/MM/DD
DATE	ON	03/03/31
TIME	ON	20:30:00
LOCATION		RIGHT BOTTOM

7.3 Date / Time

Time and date for the on-screen calendar and clock is set from this menu.

Date Format :

The date format can be one of the following :

- a. YY/MM/DD : (year – month – day)
- b. MM/DD/YY : (month – day – year)
- c. DD/MM/YY : (day – month – year)

Date :

Toggles the date for the monitor display ON/OFF.

Time :

Toggles the date for the monitor display ON/OFF.

Location :

Set the location to display time and date. The position can be one of the following:

- a. LEFT TOP
- b. RIGHT TOP
- c. LEFT BOTTOM
- d. RIGHT BOTTOM
- e. TOP
- f. BOTTOM

- When recording, date / time will be stored together with the image. Please try and prevent the constant changing of date / time setup. Thus, to prevent any unnecessary error to occur.**

7.4 Record Setting

When entered to the main menu, select **Record Setting** and press **<ENTER>** key

to enter the menu :

Press **<←>**、**<→>** key to move the cursor

Press **<+>**、**<- >** key to make changes

Press **<EXIT>** key to return to the previous page.

Press **<STOP>** key to skip over the main menu (Image display).

RECORD SETTING

QUALITY	MID
RESOLUTION	720X240
REC RATE	10 FPS
DISK FULL	OVERWRITE
AUDIO IN	OFF

RECORD TIME

TOTAL TIME	:	38.5HR
REMAINING TIME	:	0.3HR

Quality : Three choices to select from:

High : Large file capacity and high image quality display.

Mid : Medium file capacity and medium image quality display.

Low : Small file capacity and low image quality display.

Resolution : **720 × 240** or **360 × 240**.

REC Rate : Press **<+>**、**<- >** key to adjust the recording rate.

When Quality setting is HIGH:720x240 : 1~6 FPS

360x240 : 1~9 FPS

When Quality setting is Mid or Low:720x240 : 1~10 FPS

360x240 : 1~15FPS

Disk Full :

Overwrite : When the disk is full, it starts to overwrite the information from the beginning

DVR 1 Port User Manual

Stop : When the disk is full, it stops recording
(screen display disk full message warning).

Audio In :

ON : Audio recording "ON".

OFF : Audio recording "OFF".

Record Time :

Total Time : According to quality, resolution, the HDD Capacity and the recording rate reflects the total available recording time.

Remaining Time: According to quality, resolution, the HDD Capacity and the recording rate reflects the remaining recording time.

7.5 Record Mode

In the **Main Menu** move the cursor toward **Record Mode**, press **<ENTER>** key to enter the recording mode display:

<u>RECORD MODE</u>			
SCHEDULE RECORDING			
REC	BEGIN / END		
OFF	20:00 / 08:00		
MOTION DETECTION RECORDING			
REC	BEGIN / END	SEN	GRID
OFF	20:00 / 08:00	3	SET
POST ALARM TIME : 10 SEC			

Press **<←>**、**<→>** key to move the cursor.

Press **<+>**、**<->** key to make changes.

Press **<EXIT>** key to return to the previous page.

Press **<STOP>** key to skip over the main menu(Image display).

Two types of recording mode :

- a. **Schedule Recording:** According to the schedule time, to set camera for continuous recording.

REC :

ON : For **Schedule Recording** "ON".

OFF : For **Schedule Recording** "OFF".

* **<STOP>** key does not work during **Schedule Recording**.

BEGIN / END :

Begin : Starting time for recording.

DVR 1 Port User Manual

End : Ending time for recording.

- * **Example:** For 24H recording, the settings of the begin time must be the same as the ending time (enter 06:00 am – 06:00am)
For other time settings, recording time from 08:00 am to 21:00 pm (enter 08:00 – 21:00).

- b. Motion Detection Recording:** According to the schedule time, to set the camera for motion detect recording.

REC :

ON : For **Motion Detection Recording** “ON”.

OFF : For **Motion Detection Recording** “OFF”.

- * <STOP> key does not work during **Motion Detect Recording**.

BEGIN / END :

Begin : Starting time for recording.

End : Ending time for recording.

- * **Example:** For 24H recording, the settings of the begin time must be the same as the ending time (enter 06:00 am – 06:00am)
For other time settings, recording time from 08:00 am to 21:00 pm (enter 08:00 – 21:00).


SEN (Motion Sensitivity) : There are 5 levels of sensitivity for motion detection.

(1: High motion sensitivity rate, 5: Low motion sensitivity rate).

Grid (Motion Activity Grid) : Move the cursor to **Activity Grid**, then press <ENTER> key to enter the **Motion Activity Grid** display :

DVR 1 Port User Manual

(Red block indicates the area under motion detection)

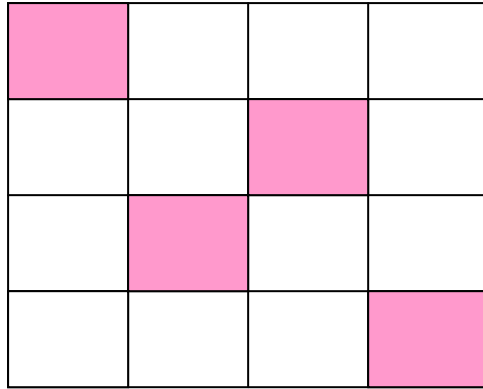

Press <←>, <→> key to move the cursor

Press <+>, <-> key to switch ON/OFF the motion detection area.

Press <EXIT> key to return to the previous page.

Press <STOP> key to skip over the main menu.

Post-alarm Time : The extra recording time, straight after when the sensor recording event ended (Time setting range from 0~99 Sec).

7.6 Alarm Buzzer Setup

In the main menu select **Alarm Buzzer Setup**, and press **<ENTER>** key to enter the menu :

ALARM BUZZER SETUP

MOTION ALARM :	ON
VIDEO LOSS :	ON
BUZZER PERIOD :	05 MIN

Press **<←>**、**<→>** key to move the cursor

Press **<+>**、**<->** key to change the settings.

Press **<EXIT>** key to return to previous page.

Motion Alarm :

ON : Notification at event of unauthorized intrusions in secured area via **BUZZER ON**.

OFF : **BUZZER OFF**.

Video Loss :

ON : VIDEO LOSS indication via BUZZER ON.

OFF : VIDEO LOSS indication via BUZZER OFF.

Buzzer Period: Control scope for up to 15 min.

- * When the **BUZZER PERIOD** is set to "00", the buzzer will be effective for only 2sec.

7.7 Engineering Setup


In the main menu select **Engineering Setup**.

Press **<ENTER>** key to enter the menu.

Press **<←>**、**<→>** key to move the cursor.

Press **<+>**、**<->** key to change the value settings

Press **<EXIT>** key to return to the previous page

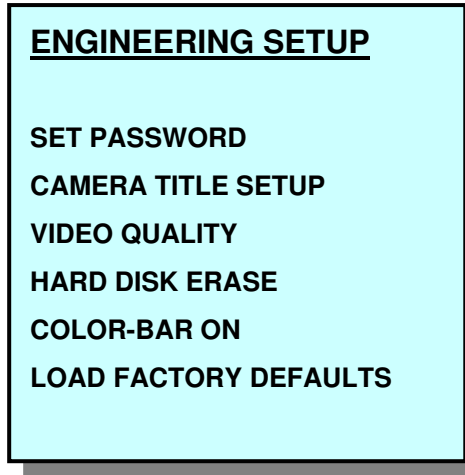

7.7.1 Set Password


 
Move the cursor to **Set Password**.

Press **<ENTER>** key to enter the menu.

Press **<←>**、**<→>** key to move the cursor.


Press **<+>**、**<->** key to change the password.

Press **<ENTER>** key again, the system will request for the old password, then for new password and after the change, press **<ENTER>** key once more to confirm.

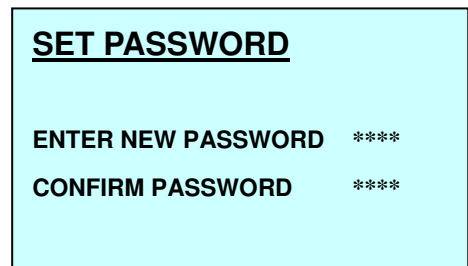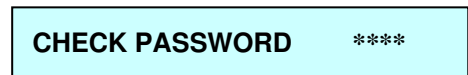

7.7.2 Camera Title Setup

Move the cursor to **Camera Title Setup**, press **<ENTER>** key to enter the menu. The camera titles can be up to eight (8) characters in length and configured using the following available characters: A-Z 0-9.

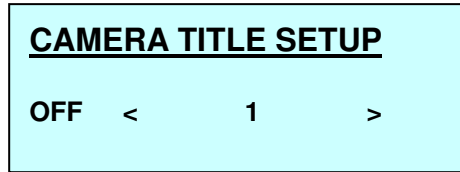

Press **<←>**, **<→>** key to move the cursor

Press **<+>**, **<->** key to change the setting values

Press **<EXIT>** key to return to the previous page

ON : To show the camera title

OFF: To hide the camera title

7.7.3 Video Quality


Adjust camera brightness, contrast, color and chroma. Four cameras may be separately adjusted.

BRIGHT	22
CONTRAST	40
CHROMA	25
SHARP	31


* This setting changes the image quality for recording images, but not for real-time monitoring images.

7.7.4 Hard Disk Erase

Move the cursor to **Hard Disk Erase**,
press <ENTER> key to enter the menu :

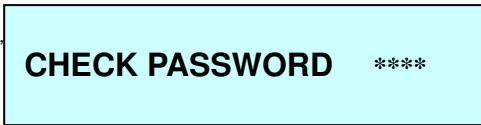

Password should be entered, before
formatting the data in the hard disk,
then press <ENTER> key to enter the
Hard Disk Erase display :

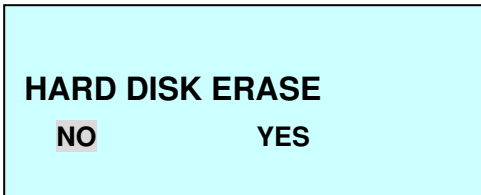


To Reconfirm:

Select "YES", then press <ENTER>
key to erasing the data in the hard
disk.

- By now all stored images are erased.


Press <EXIT> key to return to the
previous page.

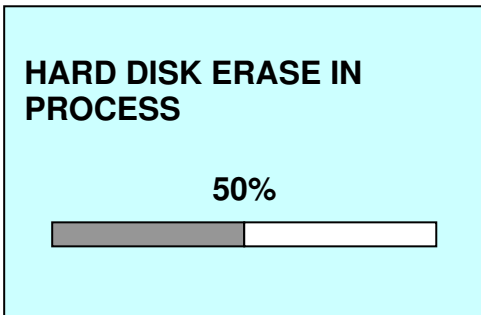

* **This method is applicable to format a new hard disk.**

7.7.5 Color-Bar


Color-Bar is helpful to user in camera settings.

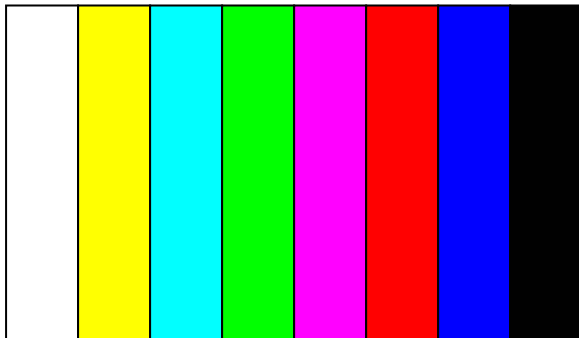

7.7.6 Load Factory Defaults

To Load defaults, please press “**YES**”,
than press <**ENTER**> key to complete
the setup procedure.

Press <**EXIT**> key to return to the
previous page.

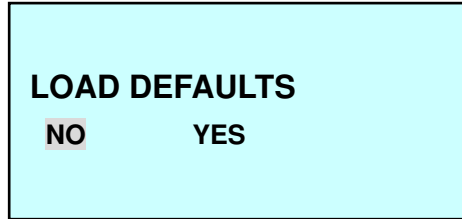

8. Recording reference time table

Below is a reference table of the Recording time:

HDD 30G

REC Rate : High

720x240			360x240			(Hour)
FRAM	RECORD TIME		FRAM	RECORD TIME		
	Audio OFF	Audio ON		Audio OFF	Audio ON	
1	203.3	159.5	1	406.7	262.4	
2	101.6	89.4	2	203.3	159.5	
3	67.7	62.1	3	135.5	114.5	
4	50.8	47.5	4	101.6	89.4	
5	40.6	38.5	5	81.3	73.2	
6	33.8	32.4	6	67.7	62.1	
			7	58.1	53.8	
			8	50.8	47.5	
			9	45.1	42.5	

REC Rate : Mid

720x240			360x240			(Hour)
FRAM	RECORD TIME		FRAM	RECORD TIME		
	Audio OFF	Audio ON		Audio OFF	Audio ON	
1	406.7	262.4	1	813.5	387.4	
2	203.3	159.5	2	406.7	262.4	
3	135.5	114.5	3	271.1	198.4	
4	101.6	89.4	4	203.3	159.5	
5	81.3	73.2	5	162.7	133.3	
6	67.7	62.1	6	135.5	114.5	
7	58.1	53.8	7	116.2	100.4	
8	50.8	47.5	8	101.6	89.4	
9	45.1	42.5	9	90.3	80.5	
10	40.6	38.5	10	81.3	73.2	
			11	73.9	67.2	

DVR 1 Port User Manual

12	67.7	62.1
13	62.5	57.6
14	58.1	53.8
15	54.2	50.5

REC Rate : Low

720x240

360x240


(Hour)

FRAM	RECORD TIME		FRAM	RECORD TIME	
	Audio OFF	Audio ON		Audio OFF	Audio ON
1	813.5	387.4	1	1627.1	508.4
2	406.7	262.4	2	813.5	387.4
3	271.1	198.4	3	542.3	312.9
4	203.3	159.5	4	406.7	262.4
5	162.7	133.3	5	325.4	225.9
6	135.5	114.5	6	271.1	198.4
7	116.2	100.4	7	232.4	176.8
8	101.6	89.4	8	203.3	159.5
9	90.3	80.5	9	180.7	145.2
10	81.3	73.2	10	162.7	133.3
			11	147.9	123.2
			12	135.5	114.5
			13	125.1	107.0
			14	116.2	100.4
			15	108.4	94.6


DVR 1 Port User Manual

9. Appendix

Din Jack Pin Configuration

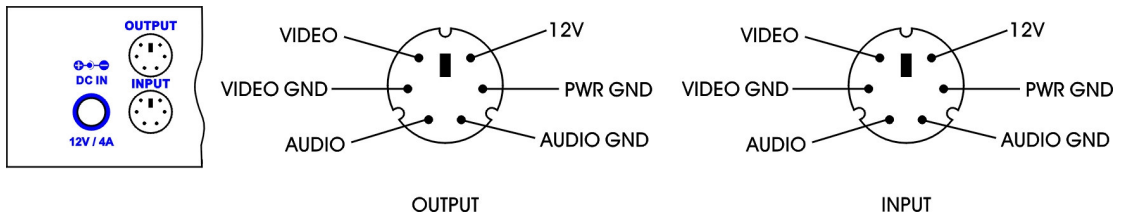

Mini Din Installation Diagram

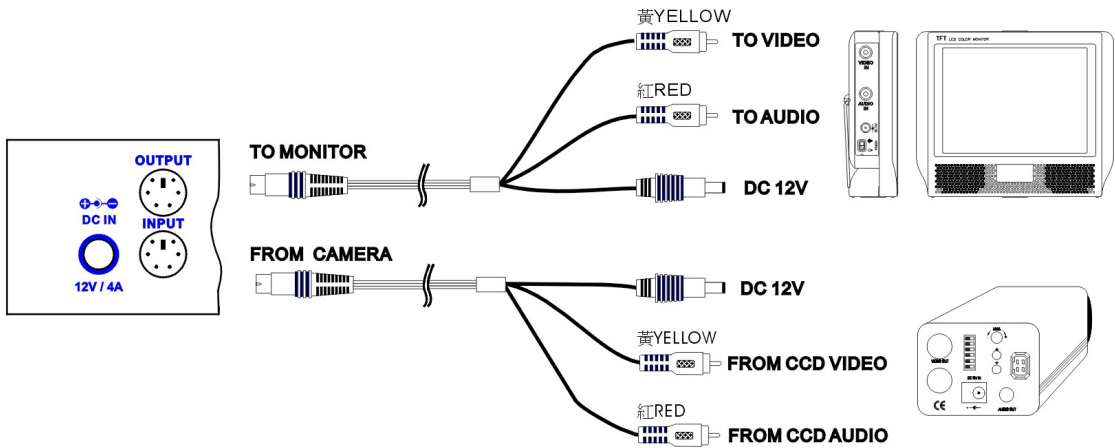

System Installation Diagram

DVR 1 Port User Manual

